Service Service Service



# Service Manual

## **TABLE OF CONTENTS**

Char	oter
Technical Specifications	1-2
Safety Instructions	1-4
Location of PCB Boards	2-1
Version Variation	2-2
Measurement Setup	2-3
Service Aids	2-4
Repair Instructions	3
Disassembly Instructions & Service positions	
Block & Wiring Diagram	5
Main Board (10/12)	6
Key Board	7
LE D Board	8
DC Download Board	9
Exploded View	

©Copyright 2011 Philips Consumer Electronics B.V. Eindhoven, The Netherlands. All rights reserved. No part of this publication may be reproduced, stored in a retrieval system or transmitted, in any form or by any means, electronic, mechanical, photocopying, or otherwise without the prior permission of Philips.

Published by PZ-SL WK1144 BG LE

Printed in the Netherlands

Subject to modication

314178536733





## 1.Technical Specifications

Amplifier		
Rated Outpu	ıt Power	2 X 5 W RMS
Frequency Re	sponse	63 Hz - 18 kHz, ±3 dB
Signal to N	Noise Ra	tio > 90 dB
MP3 Link		600 mV RMS 20 kohm
Speakers		
Speaker Imp	edance	8 ohm
Speaker Dri	ver	66 mm full range
Sensitivity	7	82 dB/m/W
Wireless		
Wireless	802.11	o/g
standard		
Wireless	WEP (64	4 or 128 bit),
security	WPA/WPA	(8-63 characters)
Frequency	2412 - 2	2462 MHz (CH1-
range	CH11) (	for /79, /37, /55, /97)
		2472 MHz (CH1-
	CH13)	(for /12, /10, /05)
PBC (one	Yes	
button push	1)	

General information	n	
AC power	Input: 100 - 240	
	V~, 50/60 Hz	
	1A/1.2 A	
	Output: 12 <del>¥</del>	
	3.0 A	
Operation Power	25 W	
Consumption		
Power Consumption in	< 0.5 W	
Standby Mode		
Dimensions		
- Main Unit (L x W x	H) 298 x 98 x	
	168 mm	
Weight		
- With Packing	2.02 kg	
- Main Unit	1.36 kg	

#### 2. Safety Instructions, Warnings, Notes, and Abbreviation List

#### Index of this chapter:

2.1 Safety Instructions

2.2 Warnings

2.3 Notes

2.4 Abbreviation List

#### 2.1 Safety Instructions

Safety regulations require the following during a repair:

- Connect the set to the Mains/AC Power via an isolation transformer (> 800 VA).
- Replace safety components, indicated by the symbol A, only by components identical to the original ones. Any other component substitution (other than original type) may increase risk of fire or electrical shock hazard.

Safety regulations require that **after** a repair, the set must be returned in its original condition. Pay in particular attention to the following points:

- Route the wire trees correctly and fix them with the mounted cable clamps.
- Check the insulation of the Mains/AC Power lead for external damage.
- Check the strain relief of the Mains/AC Power cord for proper function.
- Check the electrical DC resistance between the Mains/AC Power plug and the secondary side (only for sets that have a Mains/AC Power isolated power supply):
  - Unplug the Mains/AC Power cord and connect a wire between the two pins of the Mains/AC Power plug.
  - 2. Set the Mains/AC Power switch to the "on" position (keep the Mains/AC Power cord unplugged!).
  - 3. Measure the resistance value between the pins of the Mains/AC Power plug and the metal shielding of the tuner or the aerial connection on the set. The reading should be between 4.5 M $\Omega$  and 12 M $\Omega$ .
  - Switch "off" the set, and remove the wire between the two pins of the Mains/AC Power plug.
- Check the cabinet for defects, to prevent touching of any inner parts by the customer.

#### 2.2 Warnings

- All ICs and many other semiconductors are susceptible to electrostatic discharges (ESD 🔊). Careless handling during repair can reduce life drastically. Make sure that, during repair, you are connected with the same potential as the mass of the set by a wristband with resistance. Keep components and tools also at this same potential.
- Be careful during measurements in the high voltage section.
- Never replace modules or other components while the unit is switched "on".
- When you align the set, use plastic rather than metal tools.
   This will prevent any short circuits and the danger of a circuit becoming unstable.

#### 2.3 Notes

#### 2.3.1 General

Measure the voltages and waveforms with regard to the chassis (= tuner) ground (½), or hot ground (√), depending on the tested area of circuitry. The voltages and waveforms shown in the diagrams are indicative. Measure them in the Service Default Mode (see chapter 5) with a colour bar signal and stereo sound (L: 3 kHz, R: 1 kHz unless stated otherwise) and picture carrier at 475.25 MHz for PAL, or 61.25 MHz for NTSC (channel 3).

 Where necessary, measure the waveforms and voltages with (¬□) and without (¬□) aerial signal. Measure the voltages in the power supply section both in normal operation (□) and in stand-by (□). These values are indicated by means of the appropriate symbols.

#### 2.3.2 Schematic Notes

- All resistor values are in ohms, and the value multiplier is often used to indicate the decimal point location (e.g. 2K2 indicates 2.2 kΩ).
- Resistor values with no multiplier may be indicated with either an "E" or an "R" (e.g. 220E or 220R indicates 220 Ω).
- All capacitor values are given in micro-farads ( $\mu=\times$  10<sup>-6</sup>), nano-farads (n =  $\times$  10<sup>-9</sup>), or pico-farads (p =  $\times$  10<sup>-12</sup>).
- Capacitor values may also use the value multiplier as the decimal point indication (e.g. 2p2 indicates 2.2 pF).
- An "asterisk" (\*) indicates component usage varies. Refer to the diversity tables for the correct values.
- The correct component values are listed in the Spare Parts List. Therefore, always check this list when there is any doubt.

#### 2.3.3 BGA (Ball Grid Array) ICs

#### Introduction

For more information on how to handle BGA devices, visit this URL: www.atyourservice.ce.philips.com (needs subscription, not available for all regions). After login, select "Magazine", then go to "Repair downloads". Here you will find Information on how to deal with BGA-ICs.

#### **BGA Temperature Profiles**

For BGA-ICs, you **must** use the correct temperature-profile, which is coupled to the 12NC. For an overview of these profiles, visit the website *www.atyourservice.ce.philips.com* (needs subscription, but is not available for all regions)
You will find this and more technical information within the "Magazine", chapter "Repair downloads".

For additional questions please contact your local repair help desk.

#### 2.3.4 Lead-free Soldering

Due to lead-free technology some rules have to be respected by the workshop during a repair:

- Use only lead-free soldering tin Philips SAC305 with order code 0622 149 00106. If lead-free solder paste is required, please contact the manufacturer of your soldering equipment. In general, use of solder paste within workshops should be avoided because paste is not easy to store and to handle.
- Use only adequate solder tools applicable for lead-free soldering tin. The solder tool must be able:
  - To reach a solder-tip temperature of at least 400°C.
  - To stabilize the adjusted temperature at the solder-tip.
  - To exchange solder-tips for different applications.
- Adjust your solder tool so that a temperature of around 360°C - 380°C is reached and stabilized at the solder joint. Heating time of the solder-joint should not exceed ~ 4 sec. Avoid temperatures above 400°C, otherwise wear-out of tips will increase drastically and flux-fluid will be destroyed. To avoid wear-out of tips, switch "off" unused equipment or reduce heat.
- Mix of lead-free soldering tin/parts with leaded soldering tin/parts is possible but PHILIPS recommends strongly to avoid mixed regimes. If this cannot be avoided, carefully clear the solder-joint from old tin and re-solder with new tin.

#### Alternative BOM identification

It should be noted that on the European Service website, "Alternative BOM" is referred to as "Design variant".

The third digit in the serial number (example: KX2B0835000001) indicates the number of the alternative B.O.M. (Bill Of Materials) that has been used for producing the specific AV set. In general, it is possible that the same AV model on the market is produced with e.g. two different types of display, coming from two different suppliers. This will then result in sets which have the same CTN (Commercial Type Number; e.g. MCM394/12) but which have a different B.O.M. number.

Also, it is possible that same model on the market is produced with two production centers, however their partslist is the same. In such case, no alternative B.O.M. will be created.

By looking at the third digit of the serial number, one can identify which B.O.M. is used for the set he is working with. If the third digit of the serial number contains the number "1" (example: KX1B033500001), then the set has been manufactured according to B.O.M. number 1. If the third digit is a "2" (example: KX 2B0335000001), then the set has been produced according to B.O.M. no. 2. This is important for ordering the correct spare parts!

For the third digit, the numbers 1...9 and the characters A...Z can be used, so in total: 9 plus 26= 35 different B.O.M.s can be indicated by the third digit of the serial number.

Identification: The bottom line of a type plate gives a 14-digit serial number. Digits 1 and 2 refer to the production centre (e.g. LM is Arts), digit 3 refers to the B.O.M. code, digit 4 refers to the Service version change code, digits 5 and 6 refer to the production year, and digits 7 and 8 refer to production week (in example below it is 2008 week 50). The 6 last digits contain the serial number.



Figure 2-1 Serial number (example)

#### 2.3.6 Module Level Repair (MLR) or Component Level Repair

If a board is defective, consult your repair procedure to decide if the board has to be exchanged or if it should be repaired on component level.

If your repair procedure says the board should be exchanged completely, do not solder on the defective board. Otherwise, it cannot be returned to the O.E.M. supplier for back charging!

#### **Practical Service Precautions** 2.3.7

- It makes sense to avoid exposure to electrical shock. While some sources are expected to have a possible dangerous impact, others of quite high potential are of limited current and are sometimes held in less regard.
- Always respect voltages. While some may not be dangerous in themselves, they can cause unexpected reactions that are best avoided. Before reaching into a powered TV set, it is best to test the high voltage insulation. It is easy to do, and is a good service precaution.

#### 2.4

Abbreviation List 0/6/12 SCART switch control signal on A/V board. 0 = loop through (AUX to TV), 6 = play 16 : 9 format, 12 = play 4 : 3 format 2DNR Spatial (2D) Noise Reduction 3DNR Temporal (3D) Noise Reduction **AARA** Automatic Aspect Ratio Adaptation: algorithm that adapts aspect ratio to remove horizontal black bars; keeps the original aspect ratio Automatic Channel Installation: ACI algorithm that installs TV channels directly from a cable network by means of a predefined TXT page ADC Analogue to Digital Converter AFC Automatic Frequency Control: control signal used to tune to the correct frequency AGC Automatic Gain Control: algorithm that controls the video input of the feature AM Amplitude Modulation Automatic Noise Reduction: one of the **ANR** algorithms of Auto TV AΡ Asia Pacific AR Aspect Ratio: 4 by 3 or 16 by 9 ASF Auto Screen Fit: algorithm that adapts aspect ratio to remove horizontal black bars without discarding video information Advanced Television Systems **ATSC** Committee, the digital TV standard in the USA ATV See Auto TV Auto TV A hardware and software control system that measures picture content, and adapts image parameters in a dynamic wav ΑV External Audio Video AVC Audio Video Controller Audio Video Input Processor **AVIP** Monochrome TV system. Sound B/G carrier distance is 5.5 MHz **BLR** Board-Level Repair BTSC **Broadcast Television Standard** Committee. Multiplex FM stereo sound system, originating from the USA and used e.g. in LATAM and AP-NTSC countries **B-TXT** Blue TeleteXT Centre channel (audio) C CEC Consumer Electronics Control bus: remote control bus on HDMI connections CL Constant Level: audio output to connect with an external amplifier Component Level Repair **COLUMBUS** COlor LUMinance Baseband Universal Sub-system ComPair Computer aided rePair CP Connected Planet / Copy Protection **CSM** Customer Service Mode CTI Color Transient Improvement:

manipulates steepness of chroma

Composite Video Blanking and

Digital to Analogue Converter

low frequency amplification

Dynamic Bass Enhancement: extra

transients

Synchronization

See "E-DDC"

**CVBS** 

DAC

DBE

DDC

	Said	ity mondonomo, wan	Tilligs, Notes, and Abbreviation List
D/K	Monochrome TV system. Sound		lines. The fields are written in "pairs",
	carrier distance is 6.5 MHz		causing line flicker.
DFI	Dynamic Frame Insertion	IR	Infra Red
DFU	Directions For Use: owner's manual	IRQ	Interrupt Request
DMR	Digital Media Reader: card reader	ITU-656	The ITU Radio communication Sector
DMSD	Digital Multi Standard Decoding		(ITU-R) is a standards body
DNM	Digital Natural Motion		subcommittee of the International
DNR	Digital Noise Reduction: noise		Telecommunication Union relating to
	reduction feature of the set		radio communication. ITU-656 (a.k.a.
DRAM	Dynamic RAM		SDI), is a digitized video format used
DRM DSP	Digital Rights Management		for broadcast grade video.
DSF	Digital Signal Processing Dealer Service Tool: special remote		Uncompressed digital component or digital composite signals can be used.
DST	control designed for service		The SDI signal is self-synchronizing,
	technicians		uses 8 bit or 10 bit data words, and has
DTCP	Digital Transmission Content		a maximum data rate of 270 Mbit/s,
2.0.	Protection; A protocol for protecting		with a minimum bandwidth of 135
	digital audio/video content that is		MHz.
	traversing a high speed serial bus,	ITV	Institutional TeleVision; TV sets for
	such as IEEE-1394		hotels, hospitals etc.
DVB-C	Digital Video Broadcast - Cable	JOP	Jaguar Output Processor
DVB-T	Digital Video Broadcast - Terrestrial	LS	Last Status; The settings last chosen
DVD	Digital Versatile Disc		by the customer and read and stored
DVI(-d)	Digital Visual Interface (d= digital only)		in RAM or in the NVM. They are called
E-DDC	Enhanced Display Data Channel		at start-up of the set to configure it
	(VESA standard for communication		according to the customer's
	channel and display). Using E-DDC,		preferences
	the video source can read the EDID	LATAM	Latin America
	information form the display.	LCD	Liquid Crystal Display
EDID	Extended Display Identification Data	LED	Light Emitting Diode
	(VESA standard)	L/L'	Monochrome TV system. Sound
EEPROM	Electrically Erasable and		carrier distance is 6.5 MHz. L' is Band
	Programmable Read Only Memory		I, L is all bands except for Band I
EMI	Electro Magnetic Interference	LORE	LOcal REgression approximation
EPLD	Erasable Programmable Logic Device		noise reduction
EU	Europe	LPL	LG.Philips LCD (supplier)
EXT	EXTernal (source), entering the set by	LS	Loudspeaker
ED.	SCART or by cinches (jacks)	LVDS	Low Voltage Differential Signalling
FBL	Fast BLanking: DC signal	Mbps	Mega bits per second
EDC.	accompanying RGB signals	M/N	Monochrome TV system. Sound
FDS FDW	Full Dual Screen (same as FDW) Full Dual Window (same as FDS)	MIPS	carrier distance is 4.5 MHz
FLASH	FLASH memory	IVIIPS	Microprocessor without Interlocked
FM	Field Memory or Frequency		Pipeline-Stages; A RISC-based microprocessor
I IVI	Modulation	MOP	Matrix Output Processor
FPGA	Field-Programmable Gate Array	MOSFET	Metal Oxide Silicon Field Effect
FTV	Flat TeleVision	WOOLET	Transistor, switching device
Gb/s	Giga bits per second	MPEG	Motion Pictures Experts Group
G-TXT	Green TeleteXT	MPIF	Multi Platform InterFace
Н	H sync to the module	MUTE	MUTE Line
HD	High Definition	NC	Not Connected
HDD	Hard Disk Drive	NICAM	Near Instantaneous Compounded
HDCP	High-bandwidth Digital Content		Audio Multiplexing. This is a digital
	Protection: A "key" encoded into the		sound system, mainly used in Europe.
	HDMI/DVI signal that prevents video	NTC	Negative Temperature Coefficient,
	data piracy. If a source is HDCP coded		non-linear resistor
	and connected via HDMI/DVI without	NTSC	National Television Standard
	the proper HDCP decoding, the		Committee. Color system mainly used
	picture is put into a "snow vision" mode		in North America and Japan. Color
	or changed to a low resolution. For		carrier NTSC M/N= 3.579545 MHz,
	normal content distribution the source		NTSC 4.43= 4.433619 MHz (this is a
	and the display device must be		VCR norm, it is not transmitted off-air)
	enabled for HDCP "software key"	NVM	Non-Volatile Memory: IC containing
HDMI	decoding.	0/0	TV related data such as alignments
HDMI HP	High Definition Multimedia Interface HeadPhone	O/C OSD	Open Circuit
HP I	Monochrome TV system. Sound	OSD	On Screen Display On screen display Teletext and
1	carrier distance is 6.0 MHz	OIC	Control; also called Artistic (SAA5800)
I <sup>2</sup> C	Inter IC bus	P50	Project 50: communication protocol
I <sup>2</sup> D	Inter IC Dus	1 00	between TV and peripherals
I <sup>2</sup> S	Inter IC Sound bus	PAL	Phase Alternating Line. Color system
IF	Intermediate Frequency		mainly used in West Europe (color
Interlaced	Scan mode where two fields are used		carrier= 4.433619 MHz) and South
	to form one frame. Each field contains		America (color carrier PAL M=
	half the number of the total amount of		,

#### Safety Instructions, Warnings, Notes, and Abbreviation List

3.575612 MHz and PAL N= 3.582056 MHz) PCB Printed Circuit Board (same as "PWB")

**PCM** Pulse Code Modulation PDP Plasma Display Panel

Power Factor Corrector (or Pre-PFC

conditioner) PIP Picture In Picture PLL Phase Locked Loop. Used for e.g.

> FST tuning systems. The customer can give directly the desired frequency

POR Power On Reset, signal to reset the uP Progressive Scan Scan mode where all scan lines are

displayed in one frame at the same time, creating a double vertical

resolution.

PTC Positive Temperature Coefficient,

non-linear resistor

**PWB** Printed Wiring Board (same as "PCB")

Pulse Width Modulation **PWM QRC** Quasi Resonant Converter

**Quality Temporal Noise Reduction QTNR** Quality Video Composition Processor **QVCP** 

RAM Random Access Memory

**RGB** Red, Green, and Blue. The primary

color signals for TV. By mixing levels of R, G, and B, all colors (Y/C) are

reproduced. Remote Control

RC5 / RC6 Signal protocol from the remote

control receiver RESET signal Read Only Memory

**ROM** R-TXT Red TeleteXT

SAM Service Alignment Mode S/C Short Circuit

RC

RESET

SIF

**SCART** Syndicat des Constructeurs d'Appareils Radiorécepteurs et

Téléviseurs Serial Clock I<sup>2</sup>C

SCL CLock Signal on Fast I<sup>2</sup>C bus SCL-F

SD Standard Definition SDA Serial Data I<sup>2</sup>C

DAta Signal on Fast I<sup>2</sup>C bus SDA-F

Serial Digital Interface, see "ITU-656" SDI SDRAM Synchronous DRAM

SEequence Couleur Avec Mémoire. **SECAM** 

Color system mainly used in France and East Europe. Color carriers= 4.406250 MHz and 4.250000 MHz Sound Intermediate Frequency

SMPS Switched Mode Power Supply SoC System on Chip Sync On Green SOG

Self Oscillating Power Supply SOPS S/PDIF Sony Philips Digital InterFace

Static RAM SRAM

Service Reference Protocol SRP

SSB Small Signal Board STBY STand-BY

800x600 (4:3) **SVGA SVHS** Super Video Home System

SW Software

**SWAN** Spatial temporal Weighted Averaging

Noise reduction

SXGA 1280x1024 **TFT** Thin Film Transistor THD **Total Harmonic Distortion** 

**TMDS** Transmission Minimized Differential

Signalling

TXT **TeleteXT** 

TXT-DW Dual Window with TeleteXT

User Interface UI uР Microprocessor **UXGA** 1600x1200 (4:3)

V-sync to the module VCR Video Cassette Recorder **VESA** Video Electronics Standards

Association VGA 640x480 (4:3)

Variable Level out: processed audio VL output toward external amplifier **VSB** Vestigial Side Band; modulation

method

**WYSIWYR** What You See Is What You Record:

record selection that follows main

picture and sound 1280x768 (15:9)

**WXGA** Quartz crystal **XTAL** 1024x768 (4:3) XGA Luminance signal

Y/C Luminance (Y) and Chrominance (C)

signal


YPbPr Component video. Luminance and

scaled color difference signals (B-Y

and R-Y)

YUV Component video

## LOCATION OF PCB BOARDS

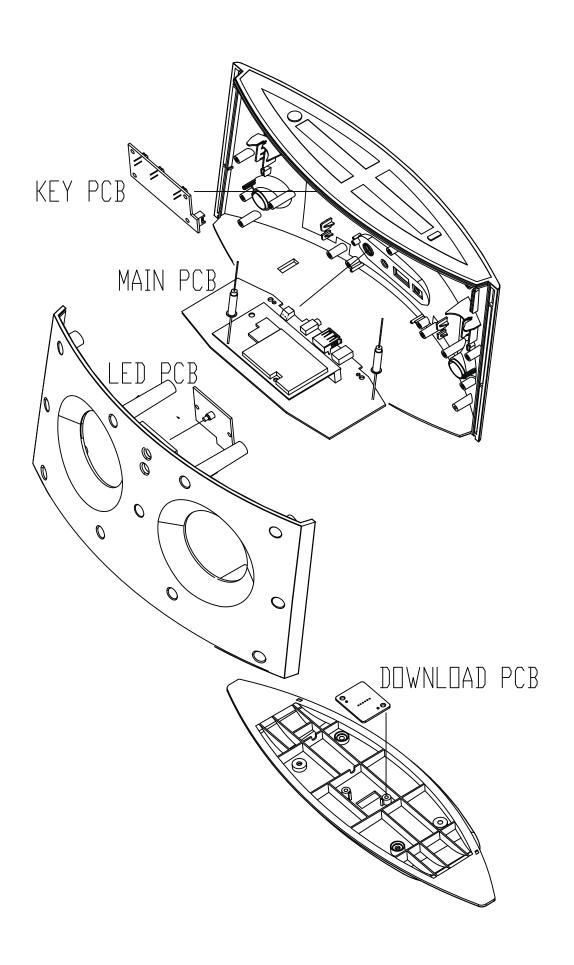

## VERSION VARIATION:


Type/Version	AD7000W
Features	/10/12/11/93
Voltage (100V-240V)	X
Output Powder(L/R): 2x5W	X

## SERVICE SCENARIO MATRIX:

Type/Version	AD7000W
Board in used	/10/12/11/93
Main Board	MLR
LED +KEY +DC Download Board	CLR


### Measurement Setup

#### Tuner FM

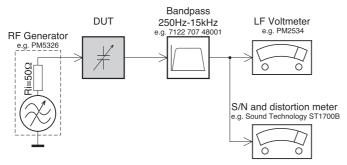

Use a bandpass filter to eliminate hum (50Hz, 100Hz) and disturbance from the pilottone (19kHz, 38kHz).


#### Tuner AM (MW,LW)

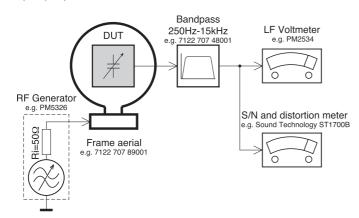

To avoid atmospheric interference all AM-measurements have to be carried out in a Faraday's cage. Use a bandpass filter (or at least a high pass filter with 250Hz) to eliminate hum (50Hz, 100Hz).


#### CD

Use Audio Signal Disc SBC429 4822 397 30184 (replaces test disc 3)

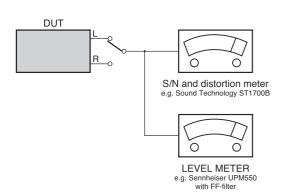

#### Recorder

Use Universal Test Cassette **CrO2** SBC419 4822 397 30069 or Universal Test Cassette **Fe** SBC420 4822 397 30071

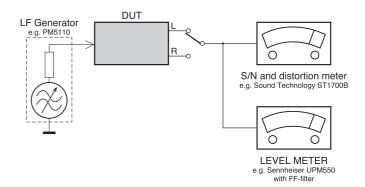

#### **SERVICE AIDS**


#### Service Tools:


Universal Torx driver holder	4822 395 91019
Torx bit T10 150mm	4822 395 50456
Torx driver set T6-T20	4822 395 50145
Torx driver T10 extended	4822 395 50423


#### **Compact Disc:**


SBC426/426A Test disc 5 + 5A	.4822	397	30096
SBC442 Audio Burn-in test disc 1kHz	.4822	397	30155
SBC429 Audio Signals disc	.4822	397	30184
Dolby Pro-logic Test Disc	4822	395	10216


#### HANDLING CHIP COMPONENTS

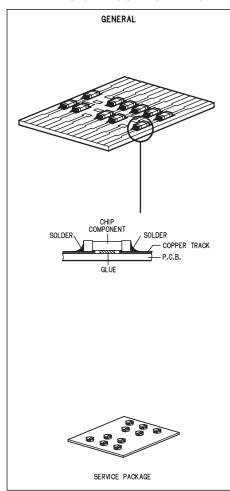

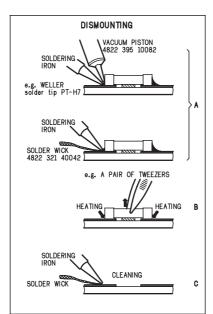

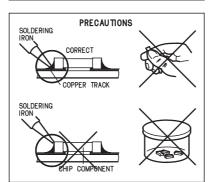


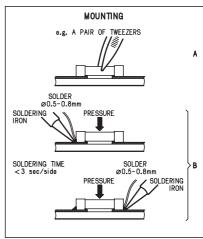


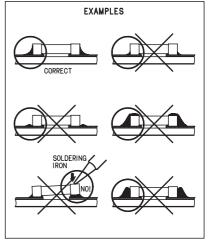

#### Rescue Mode

The AD7000W/10/12/11/93 will enter the rescue mode in case the user has unplugged the power during programming of the FLASH. To get the unit back to working, one has to connect the AD7000W00/10/12/11/93 unit via a LAN-cable (CAT5) to the internet. To get best results, connect the the LAN-cable directly to the one of the HUB-outputs of an access point (which has a DHCP enabled). The following screens will be seen during recovery …

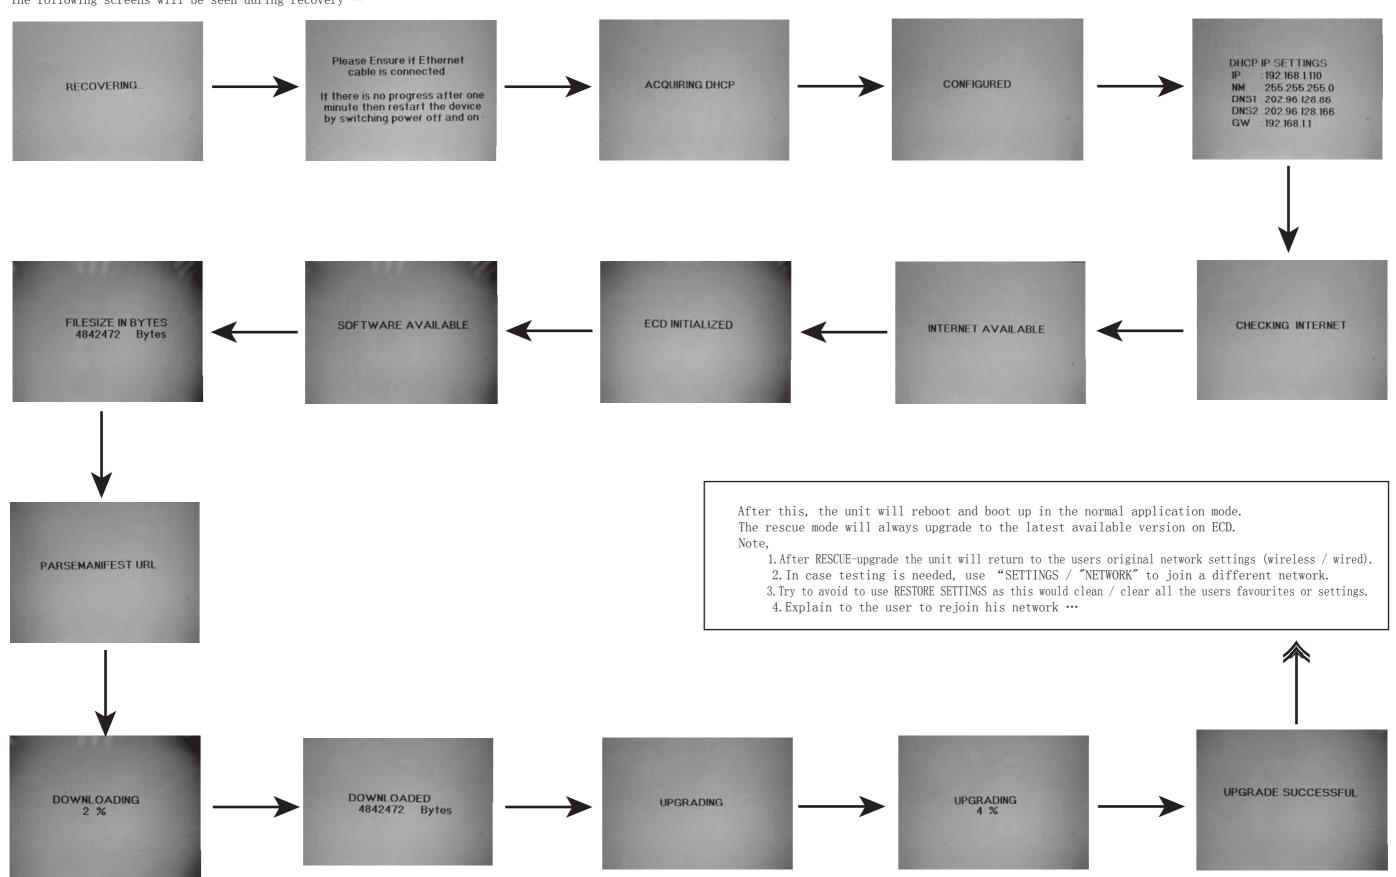

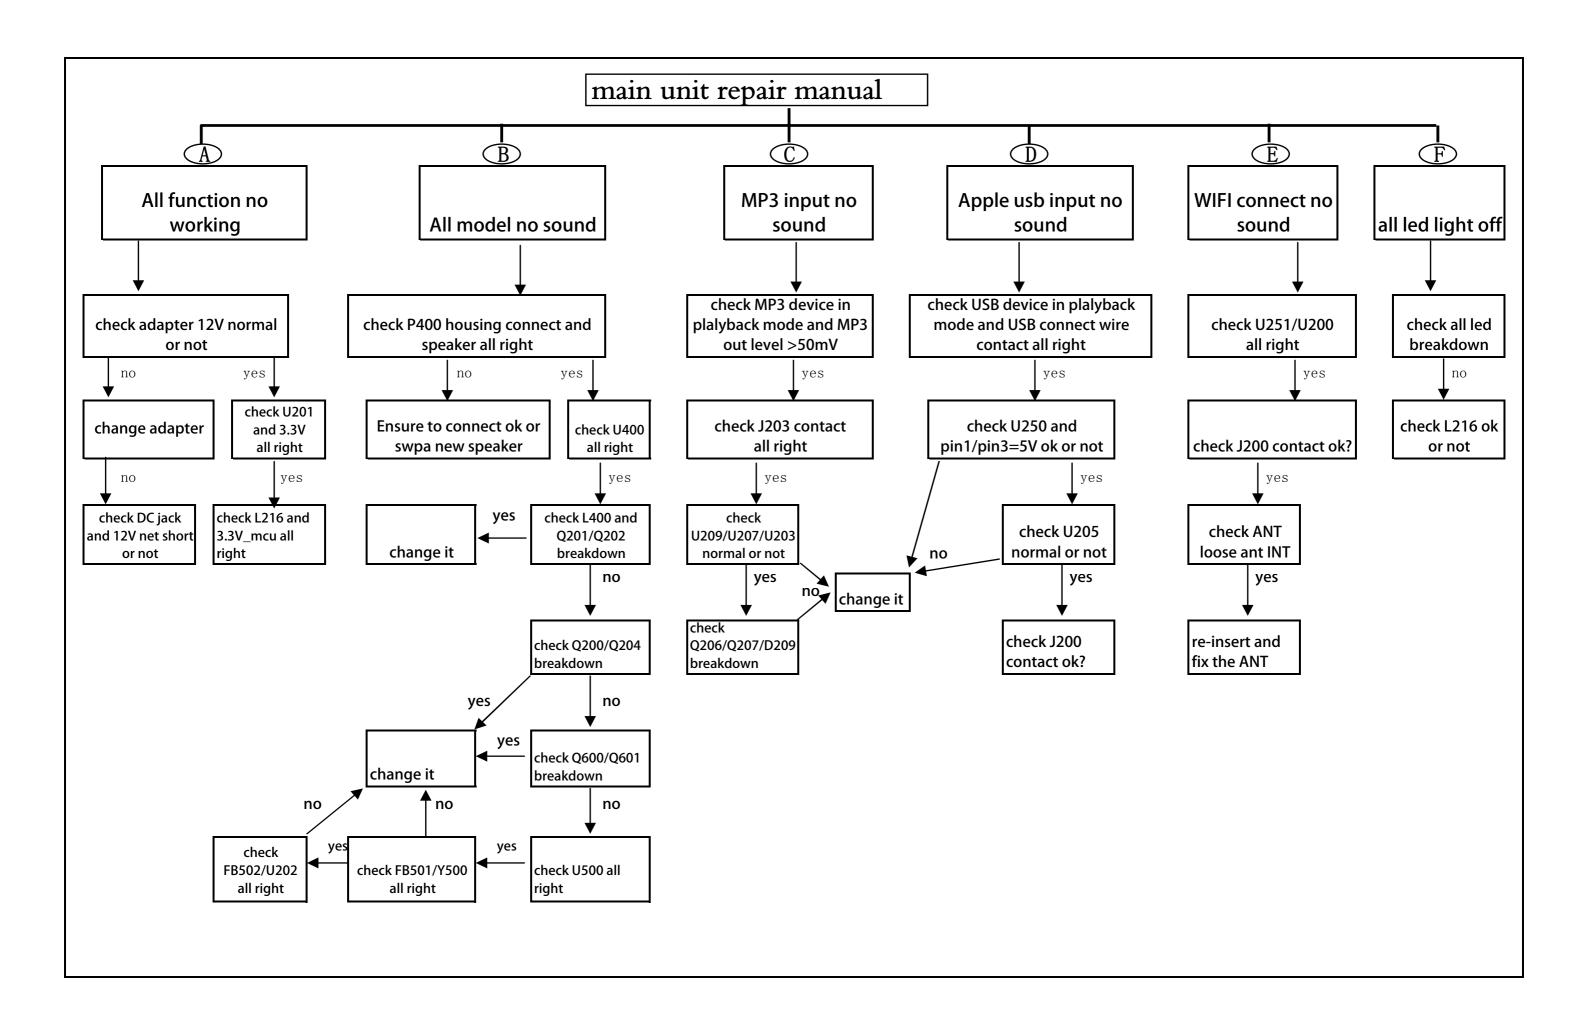

## **DISASSEMBLY INSTRUCTIONS**

## 4.1 Dismantling of Main Unit

- 1) Uncovered base pad as show in figure 1
- 2) Loosen 4screws"A" as shown in figure 2 & open speaker cloth as shown in figure 3
- 3) lossen 11 screws "B" as shown in figure4

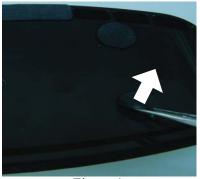


Figure 1

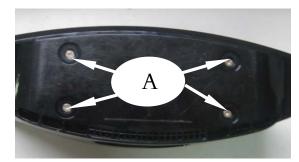


Figure2



Figure 3

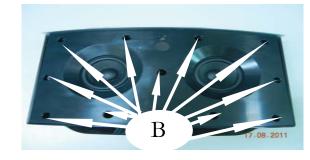


Figure 4

## Dismantling of Download & LED Board

- 1)Loosen 2screw"C" as shown in figure5 to detach Download Board
- 2)Loosen 2screw"D" as shown in figure6 to detach LED Board

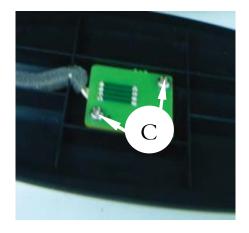


Figure5

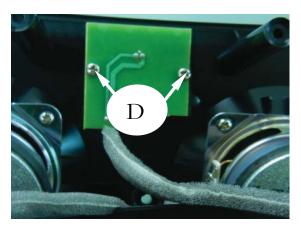


Figure6

### Dismantling of KEY & MAIN Board

- 1)Loosen 4 screw"E"as shown in figure7 to detach KEY Board
- 2)Loosen 2 screw"F" as shown in figure 8 and loosen opposide 2 srew to detach soud pipes Loosen 1 screw"G" as shown in figure 9 to detach Main Board

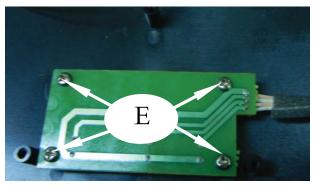


Figure 7

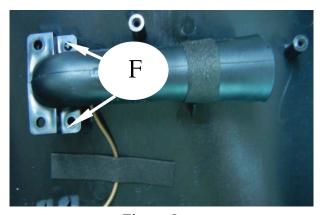


Figure 8


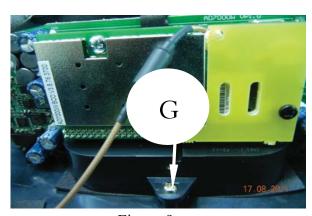



Figure 9


Note: Refer to the wiring Diagram for the correct cable connection between boards.

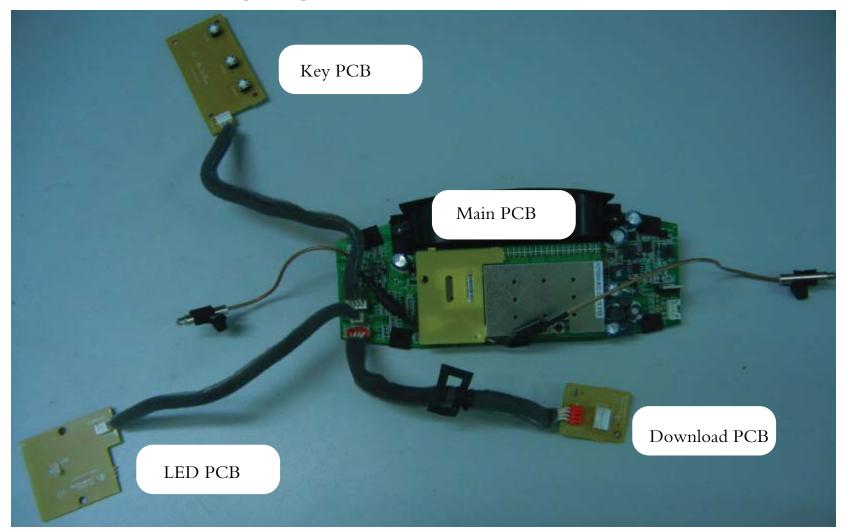

Service Position

Main Board, LED Board, Key Board, Download Board

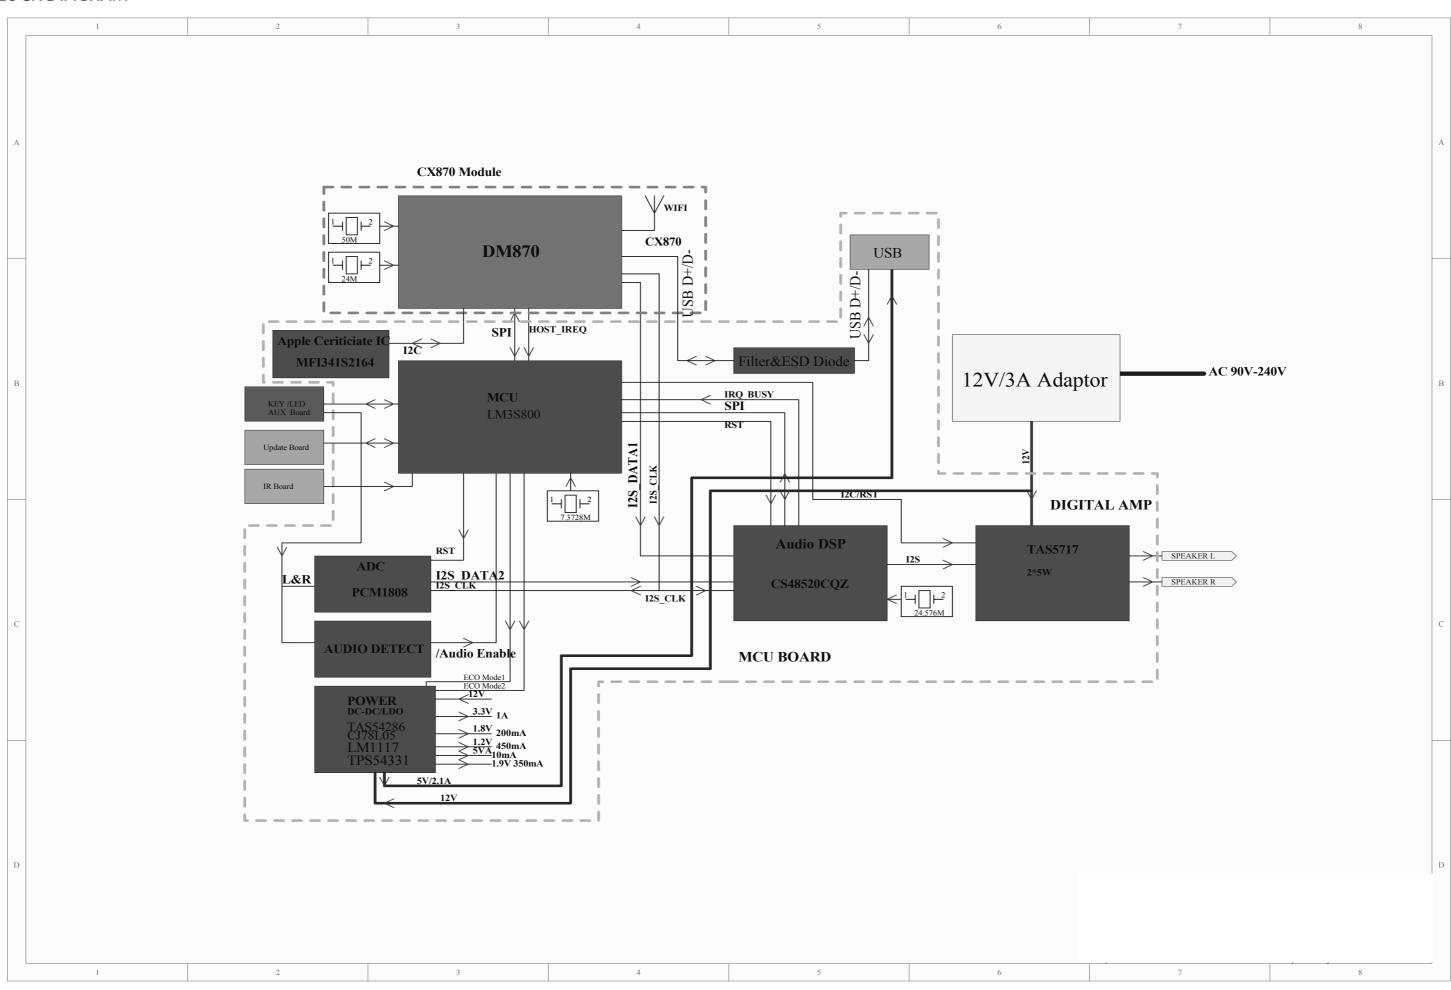

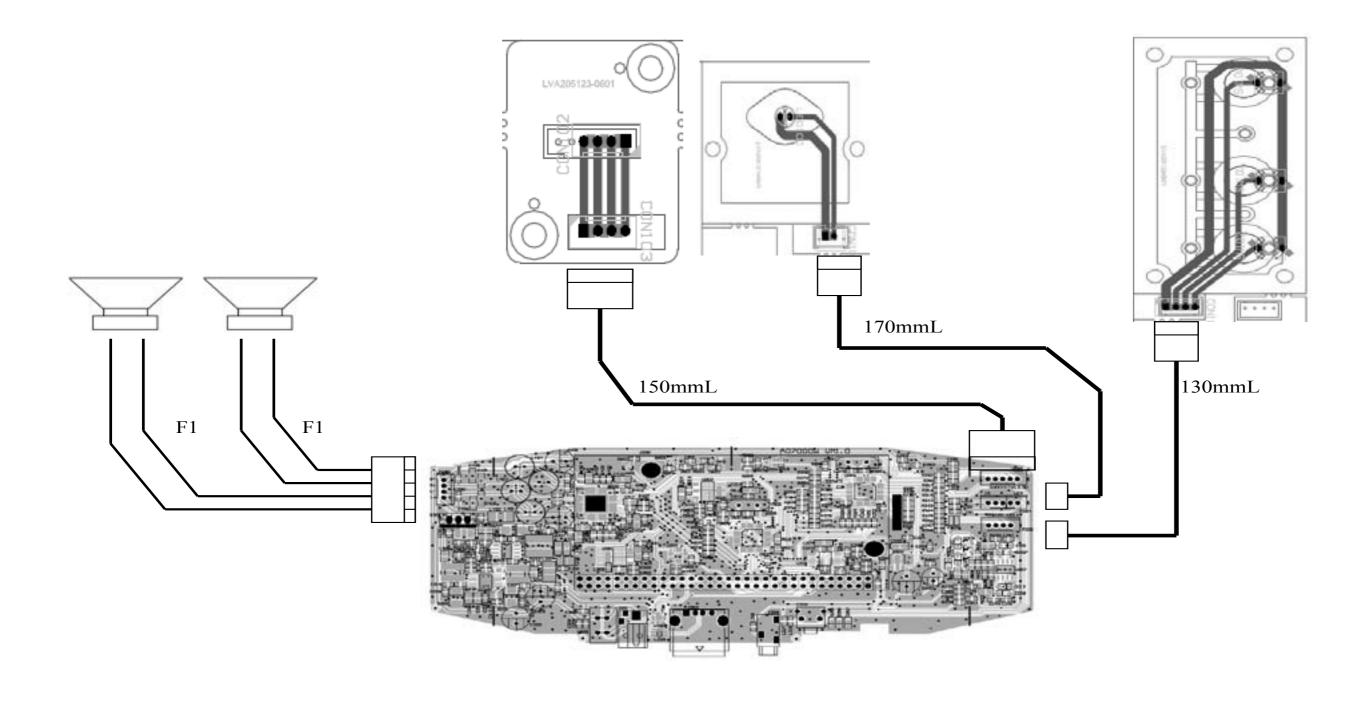

## Main Board

#### TABLE OF CONTENTS

Circuit Diagram	6-
PCB Layout Top View	6-
PCR Layout Rottom View	6.



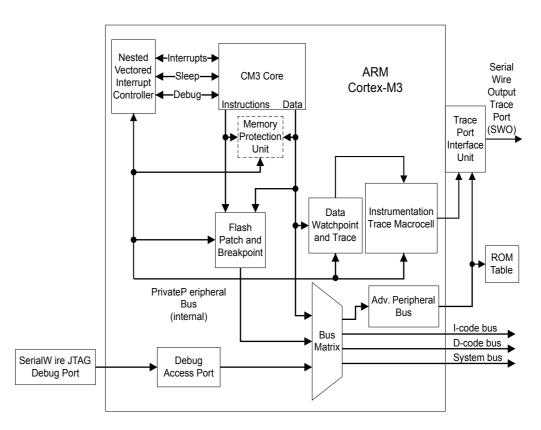



Figure: CPUB lock Diagram

## Circuit Diagram - Part 1

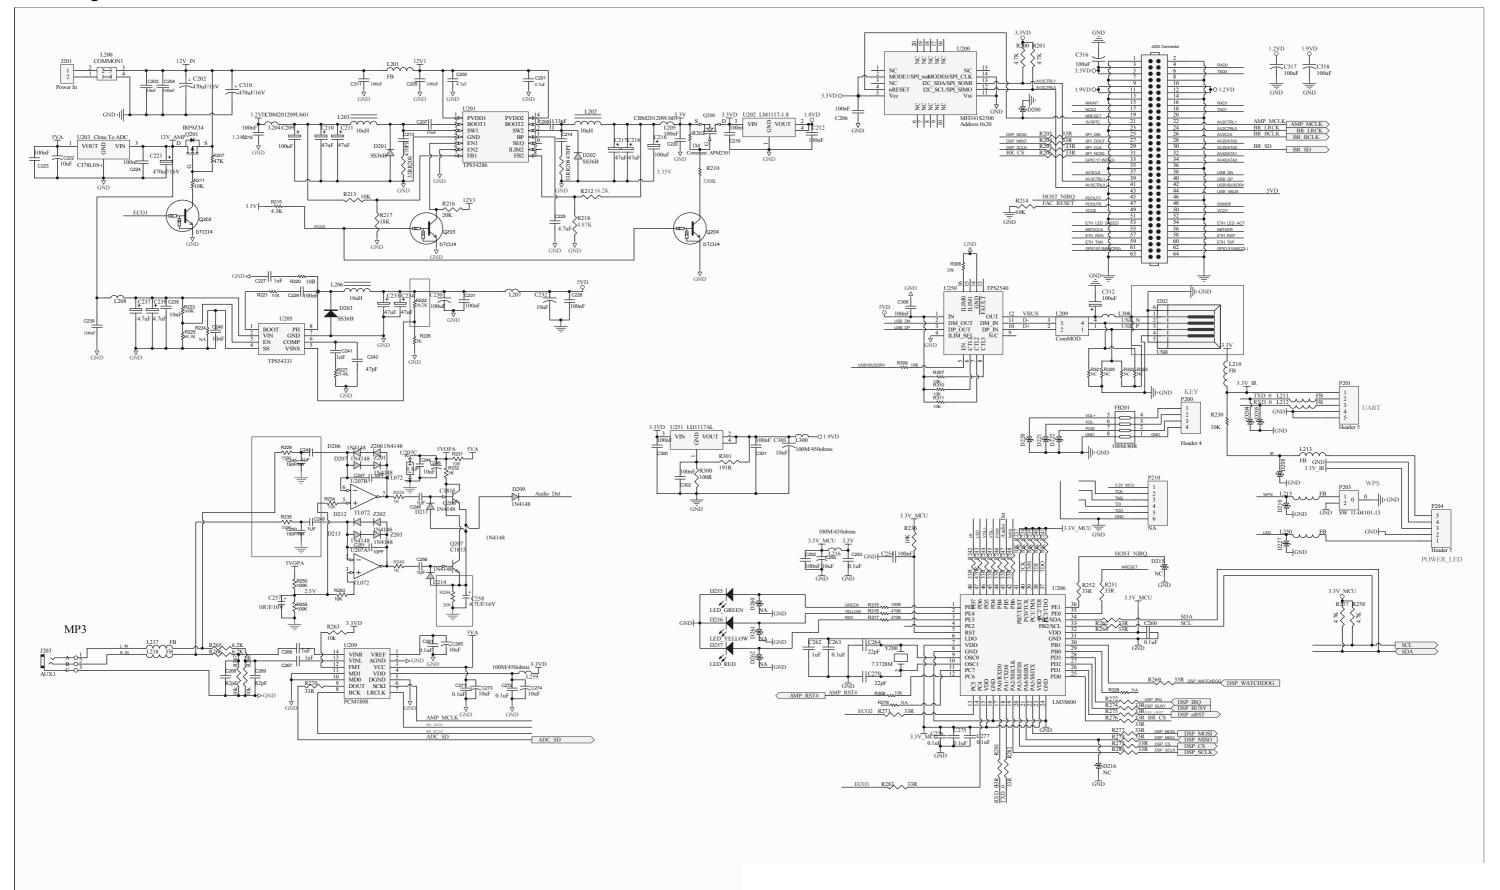


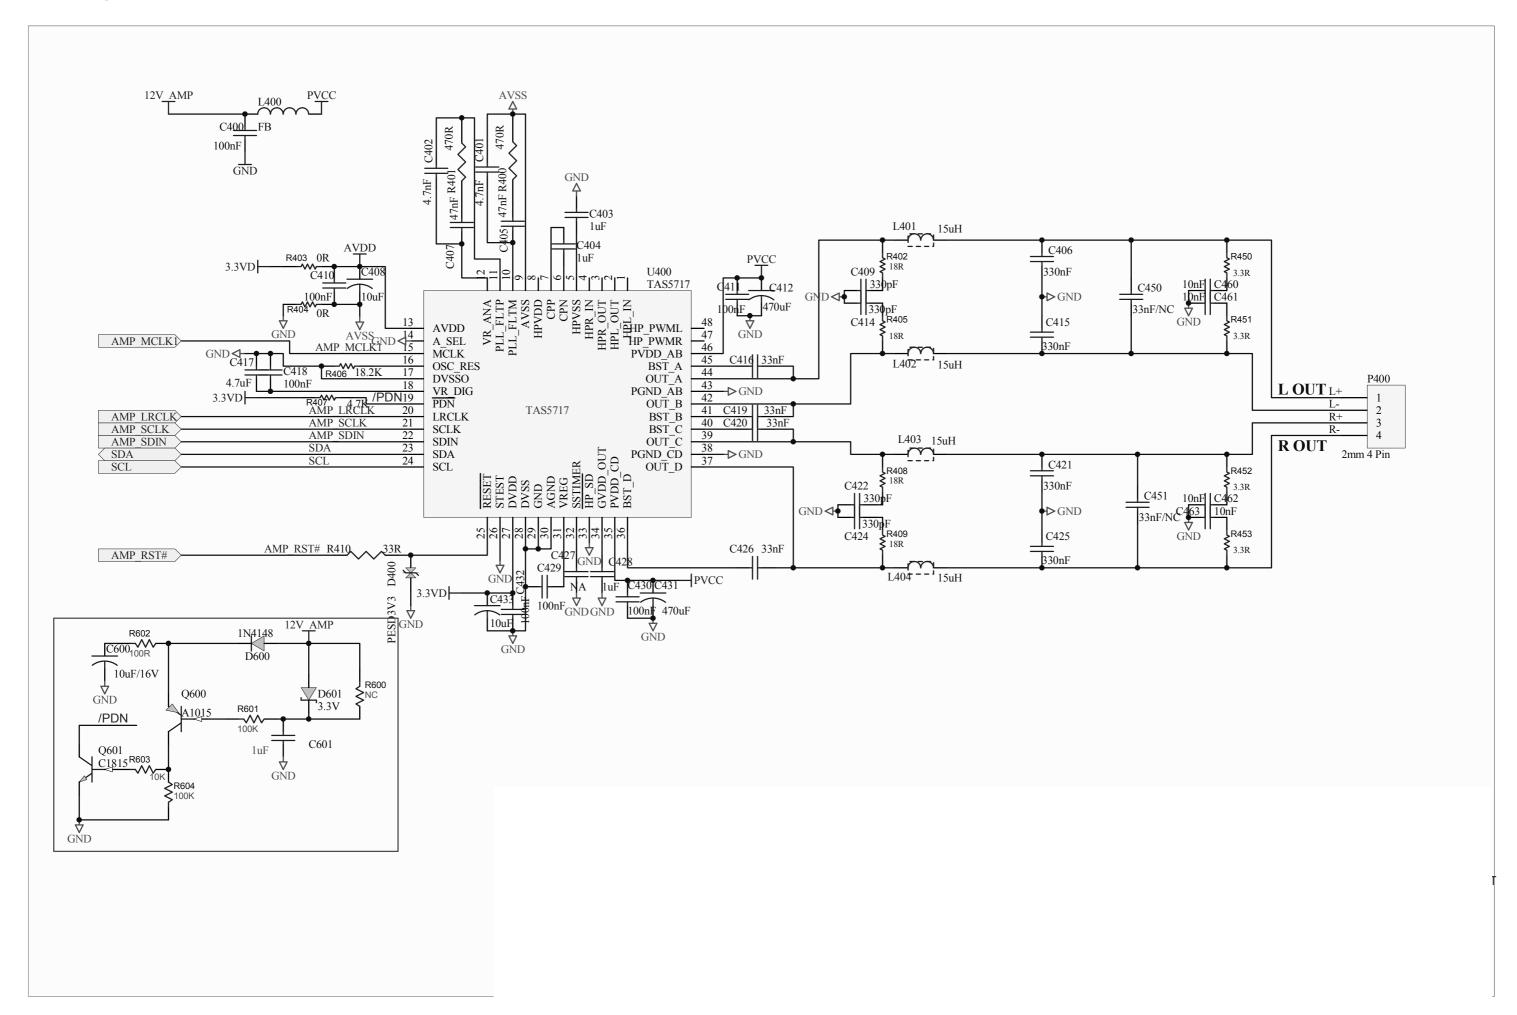


## Circuit Diagram - Part 1

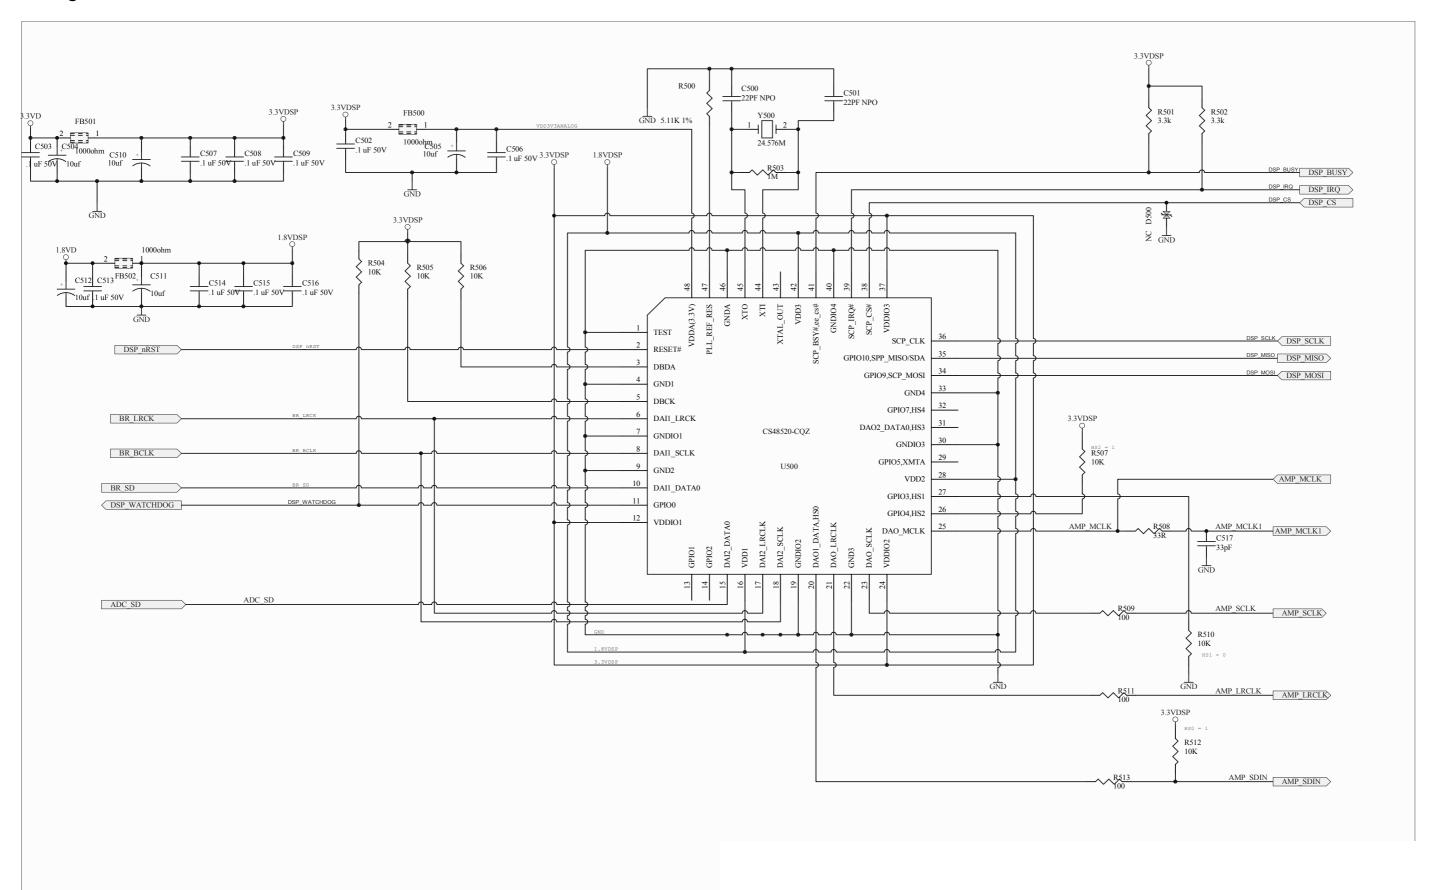


PCB Layout Top View

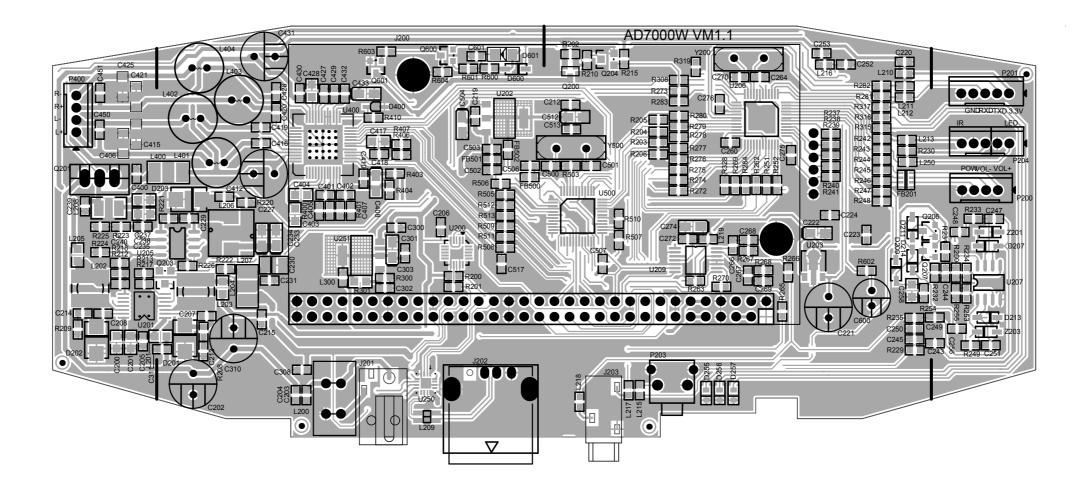


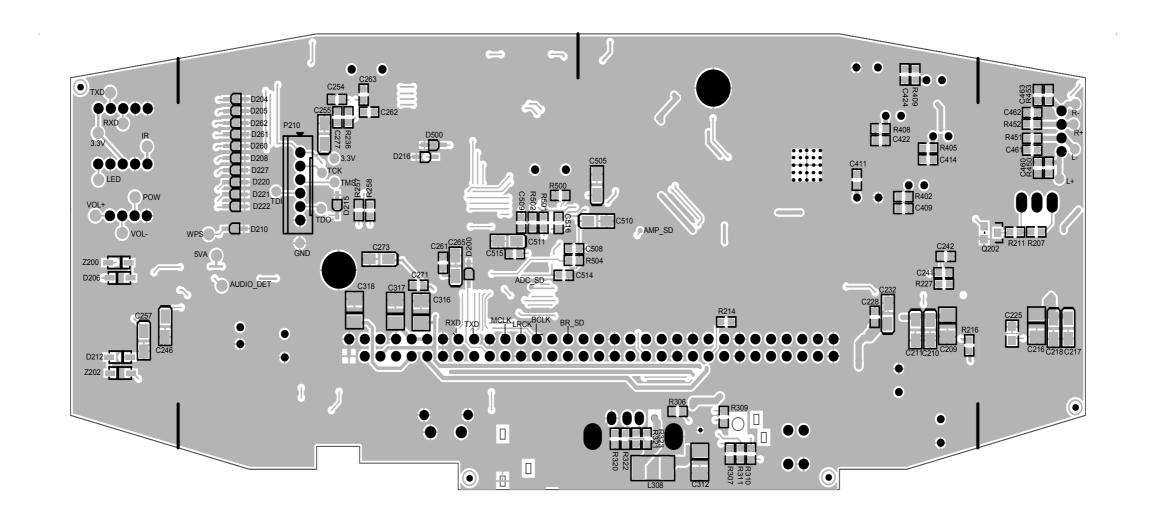

## **KEY Board**

TABLE OF CONTENTS	
Circuit Diagram	2
PCB Layout View	3

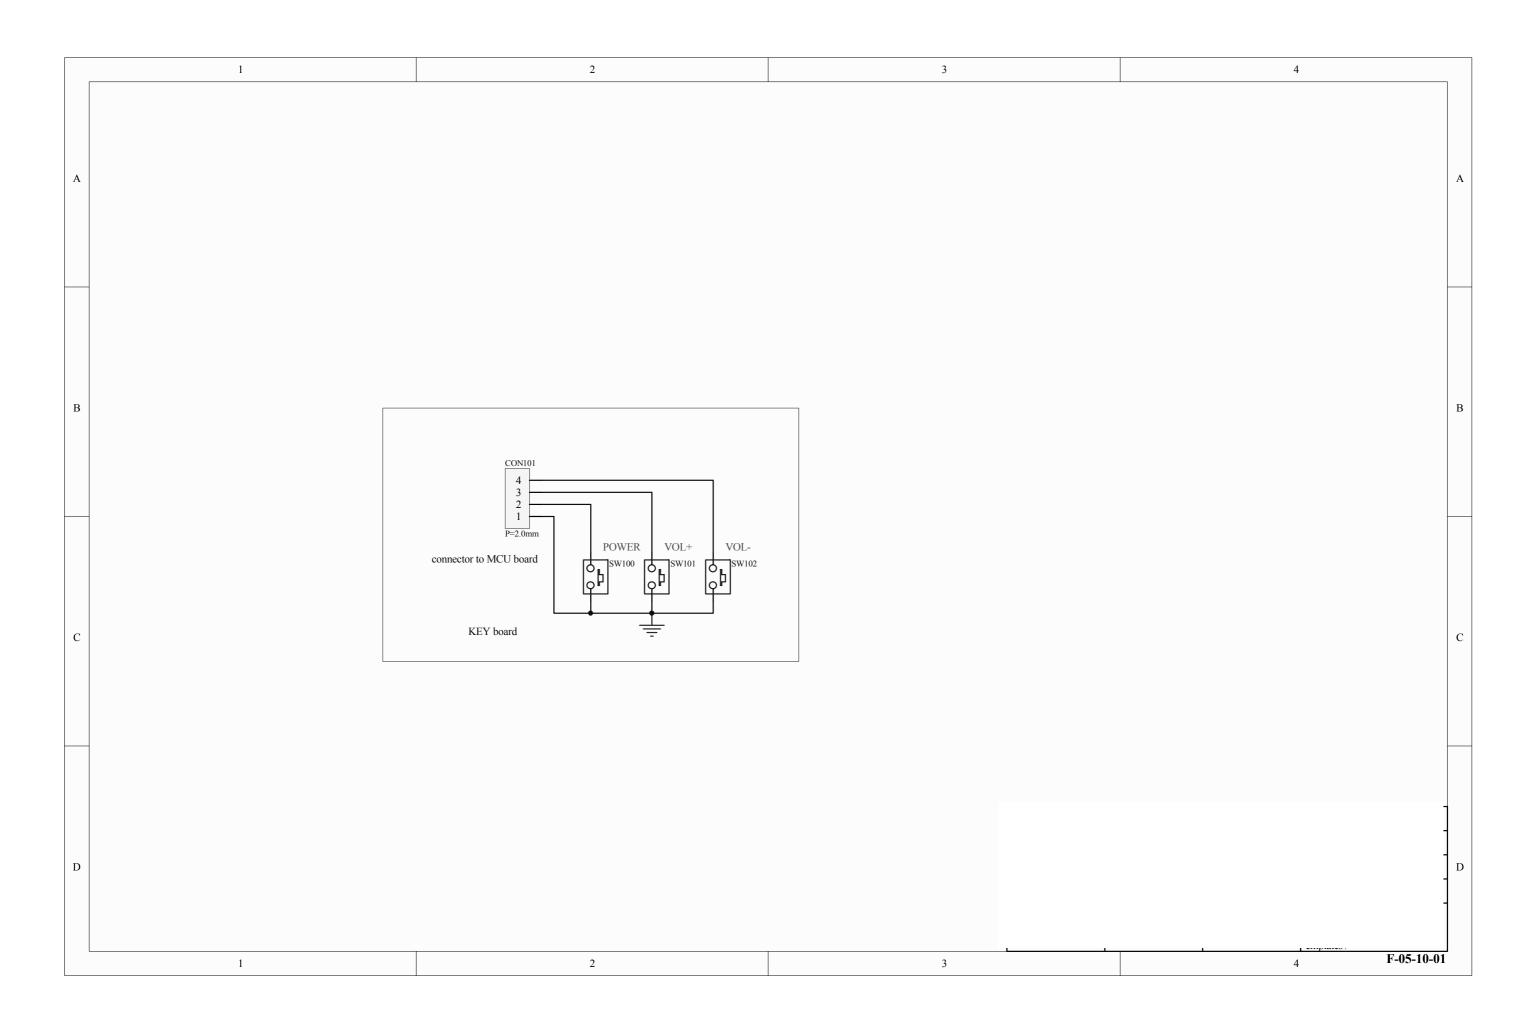

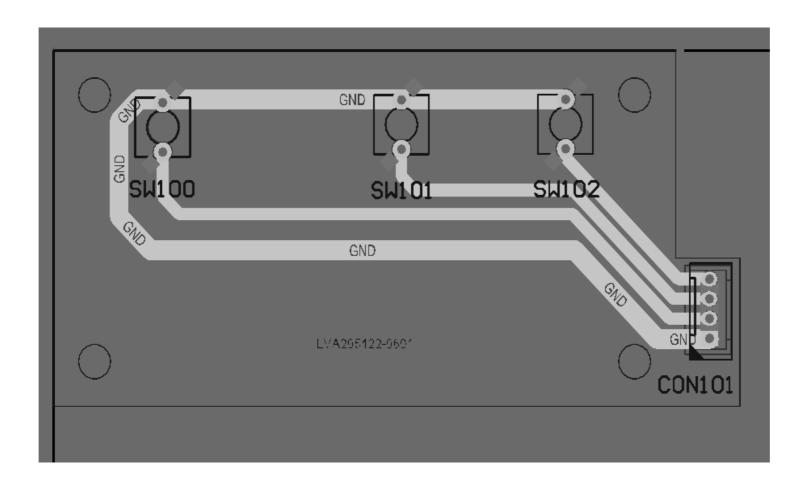


## **LED Board**

#### TABLE OF CONTENTS

Circuit Diagram	8-2
PCR Layout View	8-3

	1	2	3	4
A				A
В				В
C		connector to MCU board  LED100 BLUE		C
D	1	2	3	4

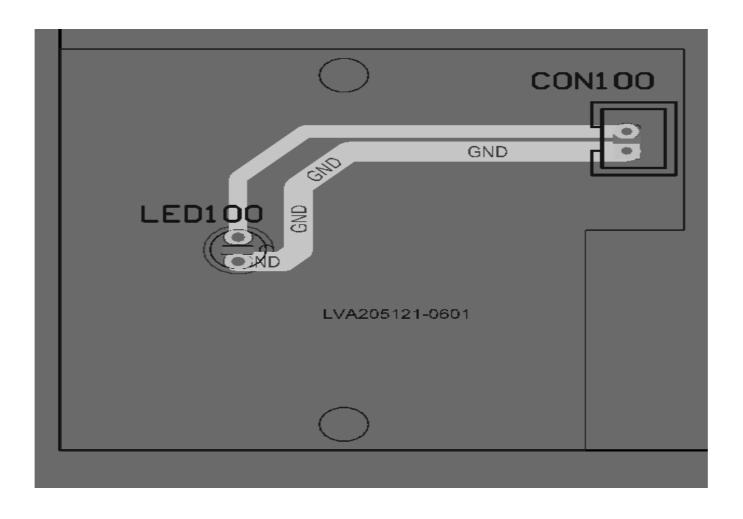

## DC Download Board

#### TABLE OF CONTENTS

Circuit Diagram	9-2
PCB Layout View	9-3

	1	2	3	4
Α				A
В		CON103    3V3		В
C		finished product updata board		С
D	1	2	3	4 F-05-10-01

