ViewSonic® | ColorPro™

VP2756-4K

Display
User Guide

IMPORTANT: Please read this User Guide to obtain important information on installing and using your product in a safe manner, as well as registering your product for future service. Warranty information contained in this User Guide will describe your limited coverage from ViewSonic® Corporation, which is also found on our web site at http://www.viewsonic.com in English, or in specific languages using the Regional selection box in the upper right corner of our website.

Model No. VS18705
P/N: VP2756-4K

PANTONE® Validated

Thank you for choosing ViewSonic®

As a world-leading provider of visual solutions, ViewSonic® is dedicated to exceeding the world's expectations for technological evolution, innovation, and simplicity. At ViewSonic®, we believe that our products have the potential to make a positive impact in the world, and we are confident that the ViewSonic® product you have chosen will serve you well.

Once again, thank you for choosing ViewSonic®!

> ^ (šÇ WŒ µŸ}v•

Please read the following **Safety Precautions** before you start using the device.

- Keep this user guide in a safe place for later reference.
- Read all warnings and follow all instructions.
- Sit at least 18" (45 cm) away from the device.
- Allow at least 4" (10 cm) clearance around the device to ensure proper ventilation.
- Place the device in a well-ventilated area. Do not place anything on the device that prevents heat dissipation.
- Do not use the device near water. To reduce the risk of fire or electric shock, do not expose the device to moisture.
- Avoid exposing the device to direct sunlight or other sources of sustained heat.
- Do not install near any heat sources such as radiators, heat registers, stoves, or other devices (including amplifiers) that may increase the temperature of the device to dangerous levels.
- Use a soft, dry cloth to clean the external housing. For more information, refer to the "Maintenance" section of this manual.
- Avoid touching the screen, as oil may collect on the screen if you touch it.
- Do not touch the screen surface with sharp or hard objects, as it may cause damage to the screen.
- Do not place the device on cloth or other materials that may be placed between the product and supporting furniture.
- When moving the device, be careful not to drop or bump the device on anything.
- Do not place the device on an uneven or unstable surface. The device may fall over resulting in an injury or a malfunction.
- Do not place any heavy objects on the device or connection cables.
- Always use cabinets, stands, or installation methods recommended by the manufacturer of the device set.
- Always use furniture that can safely support the device.
- Always ensure the device is not overhanging the edge of the supporting furniture.
- Do not place the device on tall furniture, such as cupboards or bookcases, without anchoring both the furniture and the device to a suitable support.
- Always educate children about the dangers of climbing on furniture to reach the device or related equipment.

- Do not place the monitor where children are likely to be present.
- Do not place items that might tempt children to climb, such as toys and remote controls, on the top of the device or furniture on which the product is placed.
- If smoke, an abnormal noise, or a strange odor is present, immediately turn the device off and call your dealer or ViewSonic®. It is dangerous to continue using the device.
- Do not attempt to circumvent the safety provisions of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding-type plug has two blades and a third grounding prong. The wide blade and the third prong are provided for your safety. If the plug does not fit into your outlet, obtain an adapter and do not attempt to force the plug into the outlet.
- When connecting to a power outlet, Do not remove the grounding prong. Please ensure grounding prongs are never removed.
- Always route and manage cords and cables connected to your device so they cannot be tripped over, pulled, or grabbed.
- Protect the power cord from being treaded upon or pinched, particularly at the plug, and at the point where it emerges from the equipment. Ensure that the power outlet is located near the equipment so that it is easily accessible.
- Disconnect the power plug from the power outlet if the device is not being used for a long period of time.
- Please confirm the distribution system installed in the building. The system should provide a circuit breaker rated at 120/240V, 20A.
- Only use attachments/accessories, such as carts, stands, tripods, brackets or tables, specified by the manufacturer.
- When a cart is used, use with caution when moving the cart/equipment combination to avoid injury from tipping over.

- Refer all servicing to qualified service personnel. Service will be required when the unit has been damaged in any way, such as:
  - k if the power-supply cord or plug is damaged.
  - k if liquid is spilled onto or objects fall into the unit.
  - k if the unit is exposed to rain or moisture.
  - k if the unit does not operate normally or has been dropped.
- When using ear-/headphones, adjust the volume to appropriate levels, or hearing damage may result.

- Fastening the display to a wall or fixed object using cordage or other restraining devices can help support the weight of the display in order to prevent the display from falling over.

, } o ‰ © Œ (W x H)	Interface Pad (W x H x D)	Pad Hole	^ Œ Á ^ ‰]. Ÿ } v
100 x 100 mm	115 x 115 x 2.6 mm	Ø 5 mm	M4 x 10 mm 4 pieces

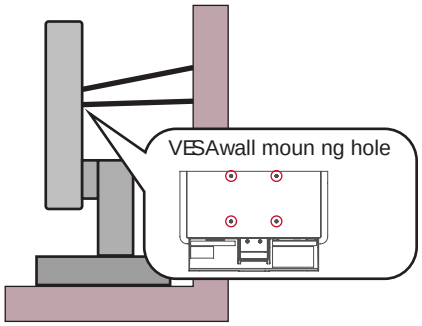

E K d W)

- Restraining device/cordage should be able to withstand 100N force.
- Make sure the cordage is straightened, and any slack is removed. The back of the device shall face the wall to ensure the device cannot tilt under external force.
- Make sure the display does not tilt under external force at any height and rotation angle of the device.

- If the existing display is going to be retained and relocated, the same considerations as above should be applied.

Contents

Safety Precautions 3

Introduction 8

Package Contents 8
Product Overview 9

Initial Setup 10

Installing the Stand 10
Wall Mounting 12
Using the Security Slot 14

Making Connections 15

Connecting to Power 15
Connecting External Devices 16
HDMI Connection 16
DisplayPort Connection 17
USB Connection 18

Using the Monitor 19

Adjusting the Viewing Angle 19
Height Adjustment 19
Tilt Angle Adjustment 20
Screen Orientation Adjustment (Monitor Pivot) 20
Swivel Angle Adjustment 22
Turning the Device On/Off 23
Using the Control Panel Keys 24
Quick Menu 24
Hot Keys 26
Configuring the Settings 28
General Operations 28
On-Screen Display (OSD) Menu Tree 31
Menu Options 37

Advanced Features and Settings 46
Auto Pivot 46
Colorbration+ 47
Color Blindness Mode 48
Firmware Update 49
Appendix 50
Specifications 50
Glossary 52
Troubleshooting 57
Maintenance 59
General Precautions 59
Cleaning the Screen 59
Cleaning the Case 59
Disclaimer 59
Regulatory and Service Information 60
Compliance Information 60
FCC Compliance Statement 60
Industry Canada Statement 60
CE Conformity for European Countries 60
Declaration of RoHS2 Compliance 61
Indian Restriction of Hazardous Substances 62
Product Disposal at End of Product Life 62
A Pantone® Validated Monitor 63
Copyright Information 64
Customer Service 65
Limited Warranty 66
Mexico Limited Warranty 69

/ v š Œ } µ Ÿ } v

Package Contents

- Monitor
- Power cord
- Video cable
- Quick start guide

NOTE: The power cord and video cables included in your package may vary depending on your country. Please contact your local reseller for more] v (} Œ u Ÿ } v X

Product Overview

Front View

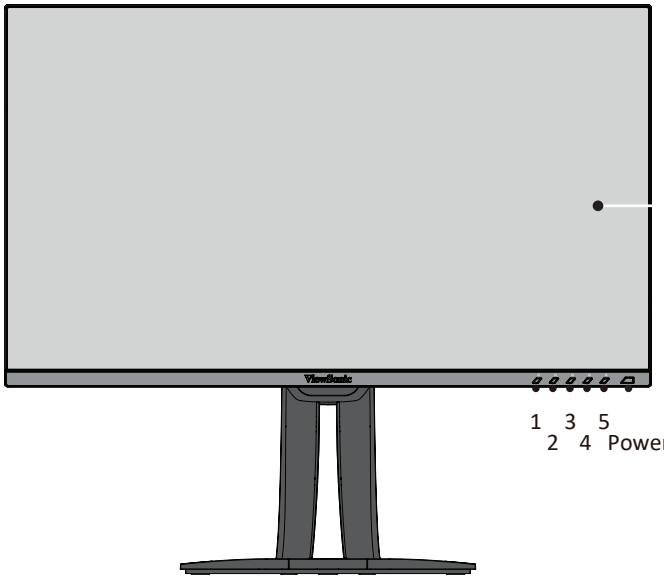

Rear View

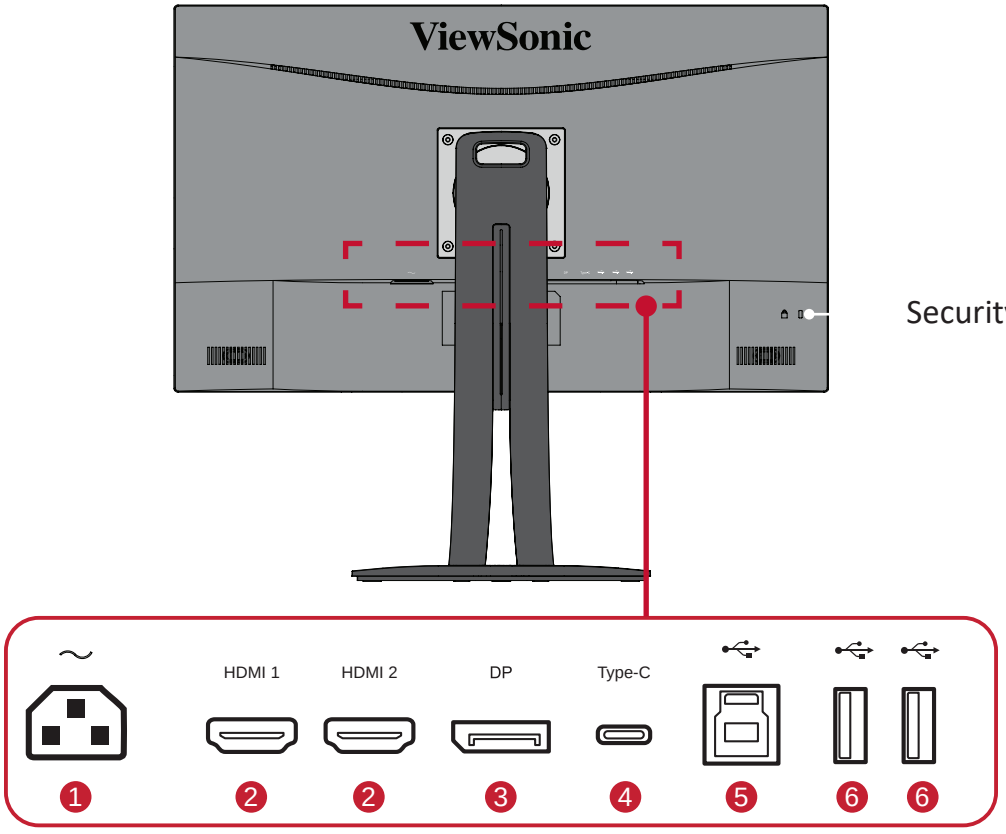

1. AC IN **2.** HDMI **3.** DisplayPort

4. USB Type C **5.** USB Upstream **6.** USB Downstream

NOTE: & } Œ u } Œ] v (} Œ u Ÿ **1/2/3/4/5** µ l š Ç š Z v] š • (µ v Ÿ } v • U
“Hot Keys” on page 26.

/ v] Ÿ o ^ š µ ‰

d Z] • • Ÿ } v ‰ Œ } À] • š] o] v • š Œ µ Ÿ } v • (} Œ • « v P

Installing the Stand

1. W o š Z u } v] š } Œ } v G š U • š o • µ Œ (Á] š Z š Z

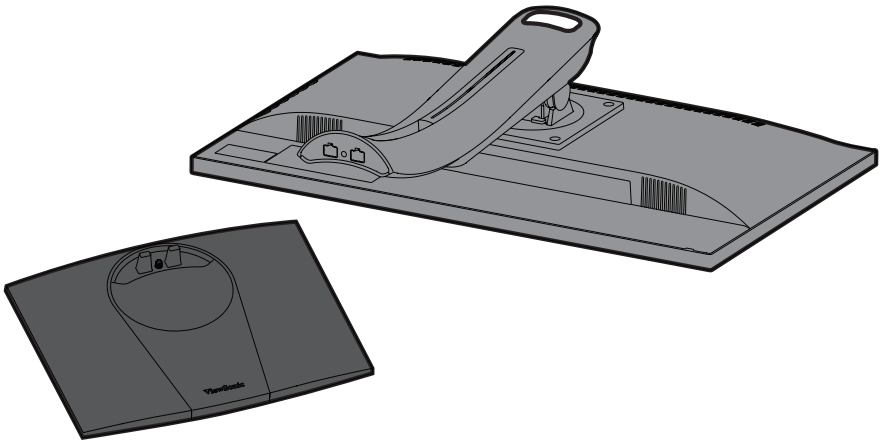
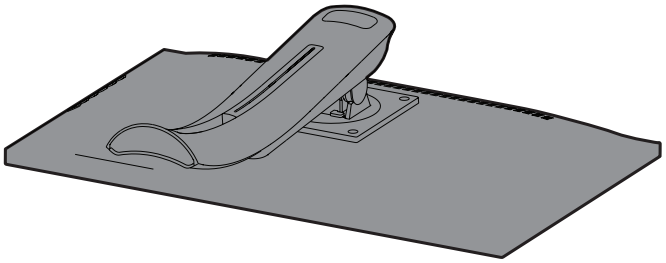
2. Align and connect the two (2) points on the monitor stand's base with the monitor stand's neck.